



AMERIGUARD

SECURITY SYSTEMS, INC.

5470 West Spruce Avenue, Suite 102 • Fresno, CA 93722
Tel.: 559-271-5007 • Fax: 559-271-5987
ACO 6587 • PPO 17320

By Pass Zone Instructions

- Step 1:** Press *1
Step 2: Enter Zone Number in two digits (Example: zone 1 would be entered 01)
Step 3: Press # to exit out of programming
Step 4: Zone is now by passed Arm system like normal

Add User Code Instructions

- Step 1:** Press *5 on keypad
Step 2: Enter your 4 digit master code
Step 3: Enter next available user number (Example: 01, 02, 03 etc.)
Step 4: Enter new 4 digit user code
Step 5: Press # key TWICE to exit programming
Step 6: Try new 4 digit user code

Delete User Code Instructions

- Step 1:** Press *5 on keypad
Step 2: Enter your 4 digit master code
Step 3: Enter user number you want to delete (Example: 01, 02, 03 etc.)
Step 4: Press * to delete user number
Step 5: Press # key TWICE to exit programming
Step 6: Try 4 digit user code to ensure it is NOT working

Troubleshooting Instructions

- Step 1:** Press *2 to view trouble condition
Step 2: Please follow directions for the following troubleshooting codes

- 1 – Service Required
- 2 – AC Trouble
- 3 – Telephone Line Trouble
- 4 – Failure to Communicate
- 5 – Zone Fault
- 6 – Zone Tamper
- 7 – Wireless Device Low Battery (Batteries are not warrantied)
- 8 – Loss of Clock/Date

******* Please Call AmeriGuard Security Systems at (559) 271-5007 with trouble code to schedule service call or get technical support over the phone *******